



## Entertaining

Imagine one button for 'Cooking' that lights up the kitchen and makes it easy to see while you're slicing and dicing. Ready for guests? Hit the 'Entertain' button that brings the lights down and sets the mood for good conversation while highlighting the key features of your home like artwork or other decor.



### Suggested System Components:

- Control4® HC-250 or HC-800 Home Controller\*
- Control4 Keypad Dimmer for kitchen lights and activating scenes

\* At least one HC-250 or HC-800 Home Controller is required